

Installation Instructions

XtremeSeam Tape™

Unroll TamlynWrap™ Drainable Housewrap with spacers facing to the exterior and fasten to sheathing with cap-fasteners.

Fasteners should provide a minimum 1/2" penetration into the nail base and be spaced approximately 12 to 18 inches apart along the horizontal and vertical laps.

TamlynWrap™ Drainable Housewrap should be installed shingle lap fashion (i.e. begin installation at the base of the wall assembly).

Extend housewrap a minimum 2 inches over sill plate.


Overlap all horizontal seams by at least 6 inches, all vertical seams by at least 6 inches and corners by 12 inches.

Be sure that the housewrap installation and flashing provide for positive drainage to the exterior of the assembly.


Do not allow the housewrap to be exposed to sunlight in excess of 120 days.

Recommended coverage within 30 days.

When using TamlynWrap™ as primary air barrier and for 15 year warranty tape all seams using XtremeSeam Tape™, ensuring the area is dry and clean and it is recommended that for best adhesion a foam roller or hand applicator is used.

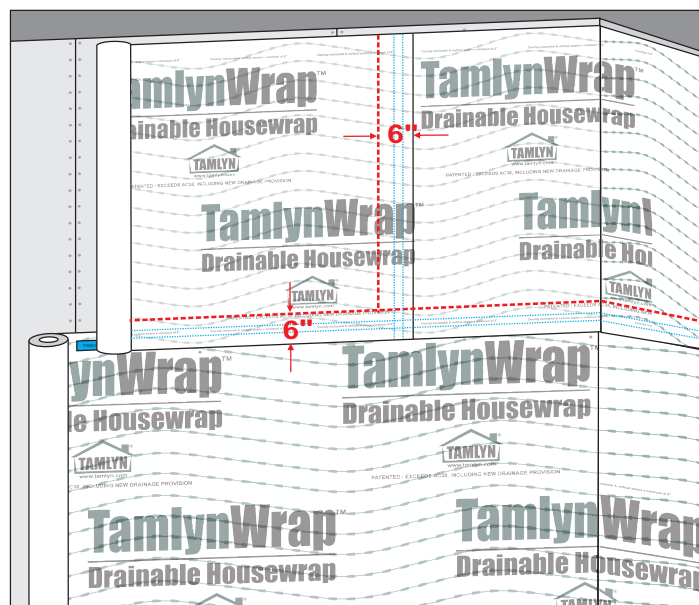


Step One

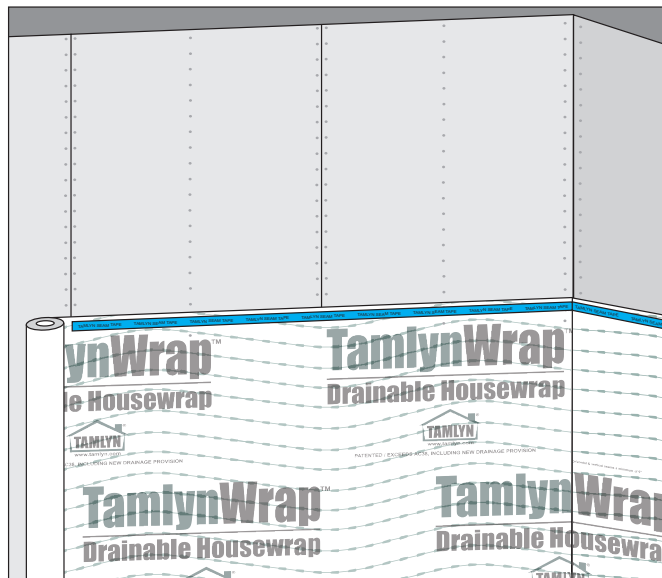

Unroll first course of TamlynWrap™ with spacers facing the exterior and fasten to sheathing with cap-fasteners. XtremeSeam Tape™ is applied to the first course by removing one side of the release paper and for best results lay down with a foam roller or hand applicator.

Step Two

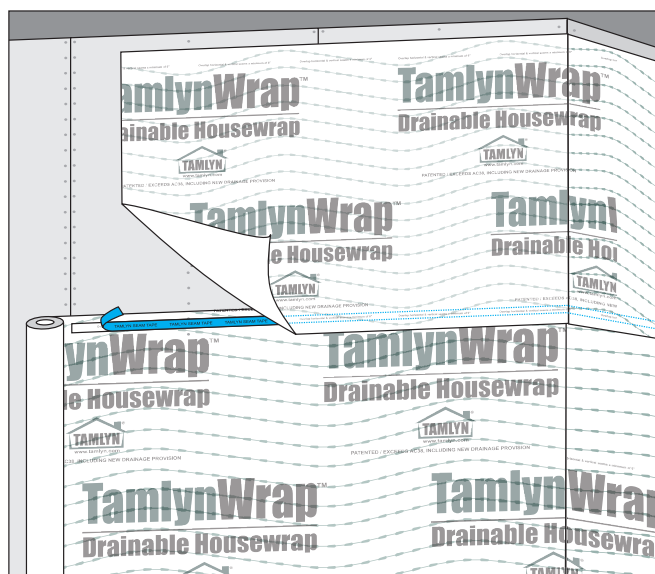

With this in-place unroll the next course of TamlynWrap™ maintaining the required 6" of overlap, with fastening stopping 9" from the bottom of this course allowing for it to be folded up.

Fold up and remove the release paper on the XtremeSeam Tape™ pressing the layers together, for best results use a foam roller or hand applicator. Then complete fastening along the seam.