

1. Rough Opening (Modified "I" Shown)



FIG 1:



FIG 2:

- Cut **TamlynWrap® WRB** as shown in (FIG 1).
- Fasten the tabs at the sill and the jambs inward. Fold up the tabs at the window head, and tuck it out of the way as shown in (FIG 2).

2. Sill Flashing - CORNERS INSTALLATION

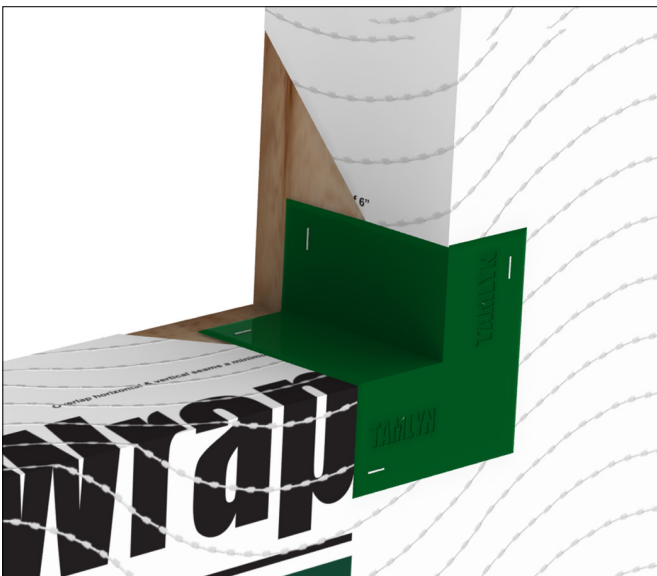


FIG 3:



FIG 4:

- Attach **Tamlyn® XtremeCorners™** to sill corners using staples or nails as shown in (FIG 3).
- Repeat for other side as shown in (FIG 4).

2. Sill Flashing – CORNERS INSTALLATION (cont)

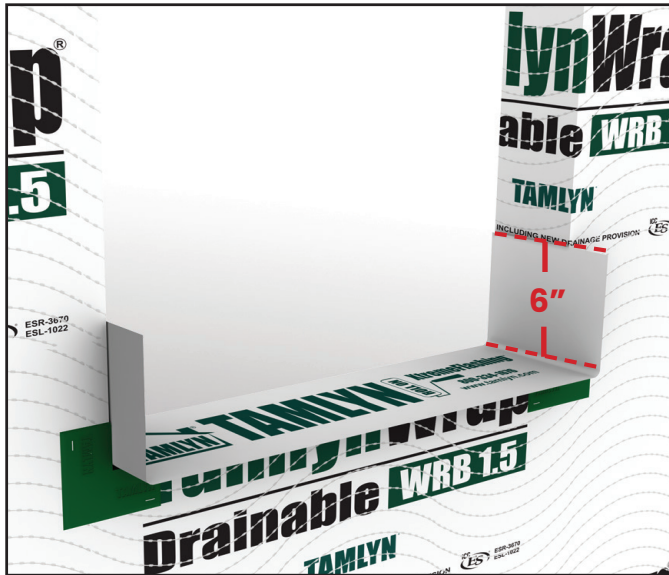


FIG 5:

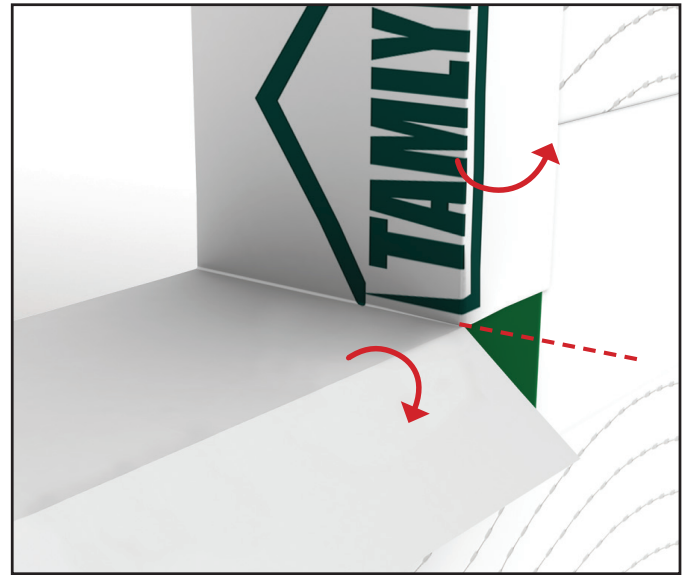


FIG 6:

- Install a piece of **XtremeFlashing™ Tape** to fully cover the sill and extend up jambs a min of **6"**. Flashing should extend to the inside edge of the rough opening as shown in **(FIG 5)**.

NOTE: Use min 6" wide flashing for 2x4 framing. Use min 9" wide flashing for 2x6 framing.

- Cut a straight slit at each corner of **XtremeFlashing™ Tape** and adhere to the exterior of the wall as shown in **(FIG 6)**.



FIG 7:

- Adhere remainder of flashing to the exterior along the jambs and sill areas as shown in. **(FIG 7)**.

***Always use roller or hand applicator when installing tapes.**

3. Sealant



FIG 6:

- Apply **XtremeSealant™** to the jambs and head of the window before installing. **Never apply the sealant at the bottom of the sill (FIG 6).**

4. Set Window



FIG 7:

- Set the window into the rough opening, level, and fasten to the substrate per window manufacturer's recommendation. Sill Flashing should be visible below the sill flange. Do not apply **XtremeFlashing™ Tape** over the bottom flange. This area is left open to allow water to drain in the event of a window leak. **(FIG 7).**

5. Jamb Flashing

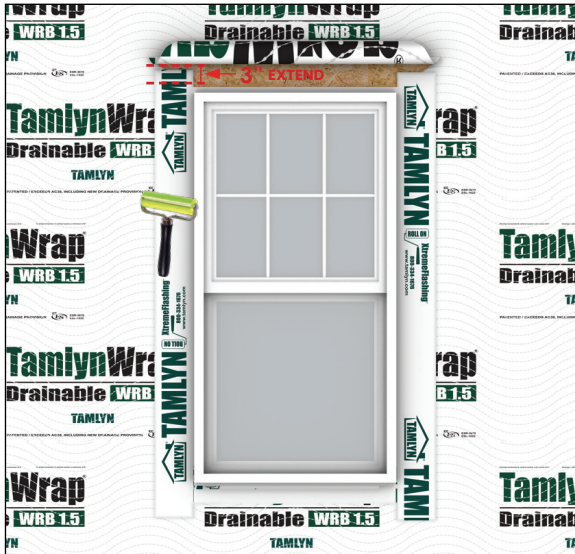


FIG 8:

- Adhere vertical sections with **XtremeFlashing™ Tape** over the jamb flanges. Extend vertical flashing approximately 3" above the window head and below sill flashing as shown in **(FIG 8)**

6. Head Flashing

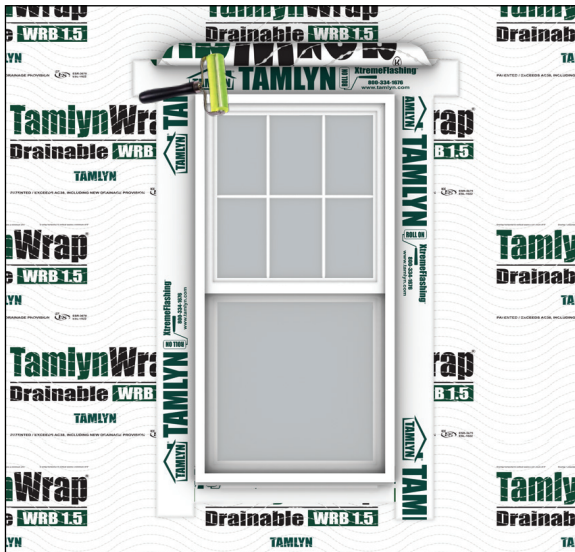


FIG 9:

- Adhere **XtremeFlashing™ Tape** to the head flange and to the sheathing. Head flashing must extend beyond jamb flashing on either side. Jamb flashing should not extend above the head flashing. **(FIG 9)**.

7. FINAL STEPS

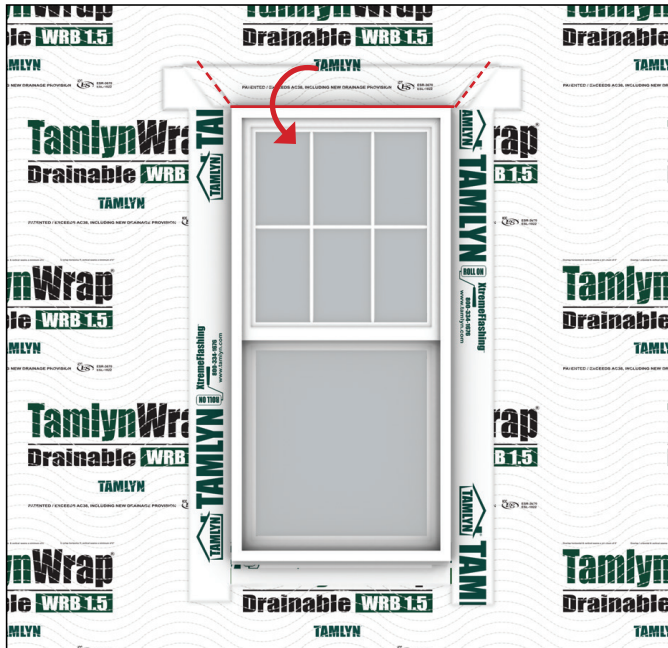


FIG 10:

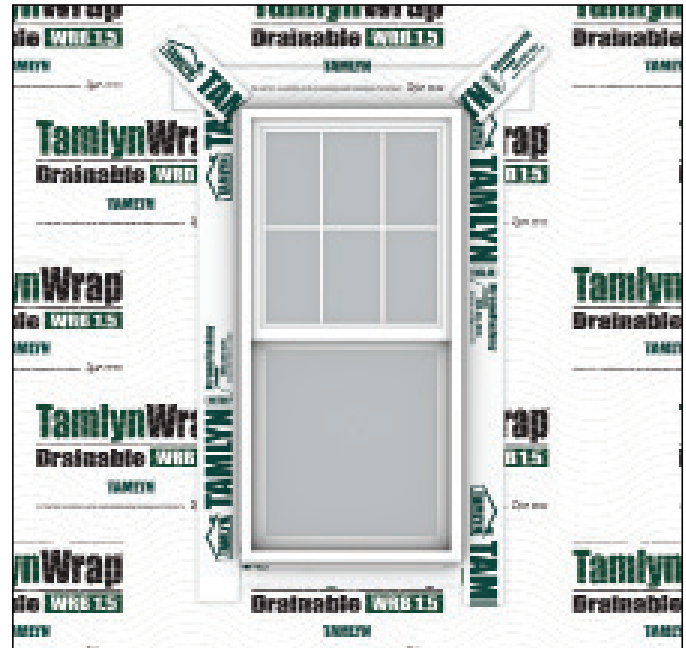


FIG 11:

- Fold the top tab of **TamlynWrap® Drainable WRB** over the head section as shown in **(FIG 10)**.
- Tape corners using **XtremeFlashing™** as shown in **(FIG 11)**.

Note: For best results, apply a continuous bead of sealant to the interior side of the window. Consult Tamlyn for additional methods and detailing.